 







 





 





 
 






Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 < Prev.	 I<< / Preset-
 0	 0
 Next >	 >>I / Preset+
 EPG	 Guide / EPG / -/--
 Up	 Up
 FAV	 Fav / Marker / PC
 Left	 Left

Original	Sustituto
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 Media	 Display / Media
 Back	 Back / Return
 Vol +	 Vol+
 Mute	 Mute / Dimmer
 CH +	 CH+ / Page+
 Vol -	 Vol-
 CH -	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Original	Sustituto
	TUNE-  << / Tune-
	Play / Pause 
	Play / Pause 
	Stop / Hold 
	>> / Tune+ 
	Rec / Rec Mode 
TIMER	SHIFT +  Sleep / Timer
WEB	LIST  Smart / List
PLUGIN	FORMAT  Picture / Format
AUDIO	LANG I/II  Audio / Lang I/II
PIP	SIZE  Zoom / Size
SUBTITLE	EQ  Subtitle / EQ
SLEEP	TIMER  Sleep / Timer
TEXT	GOTO  Text / Goto
TV	SHIFT +  TV 1 Shift + 1
RADIO	PROGRAM  TV/Radio /
HELP	RDS  AV / Input / RDS

Original	Sustituto

