

 





 


Original	Sustituto
Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV / STB	AV / Input / RDS
0	0
TV / Radio	TV/Radio /
CH +	CH+ / Page+
Mute	Mute / Dimmer
Vol +	Vol+
CH -	CH- / Page-

Original	Sustituto
Pause	Pause / Step / Freeze
Vol -	Vol-
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Red / SUB-T	Subtitle / EQ
Red / SUB-T	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow / Timer	Yellow / YouTube / Repeat
Blue / Info	Blue / Prime Video / Random
Blue / Info	Info / Angle
P.STD	Picture / Format
P.Size	Zoom / Size





Original		Sustituto	
	A L/R		Sound / Title
	Text		Text / Goto
	Recall		Back / Return
	Recall		Fav / Marker / PC
	EPG		Guide / EPG / -/--
	A.Lang		Audio / Lang I/II
	Sleep		Sleep / Timer

Original		Sustituto	

