


 
 
 






 
 



 



 

 
 

 

 
 


 


 

 



 











 
 
 

 

 




Original	Sustituto	Original	Sustituto
 Power	 Power	 Red	 Red
 1	 1	 Green	 Green
 2	 2	 Yellow	 Yellow
 3	 3	 Blue	 Blue
 4	 4	 Guide	 Guide
 5	 5	 Rec List	 List
 6	 6	 Input	 AV
 7	 7	 *	 Menu
 8	 8	 Up	 Up
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 [i+]	 Info	 Left	 Left
 [≡]	 Text	 OK	 Ok
 Google Play	 Shift + Media	 Back	 Back
 Netflix	 Media	 TV	 TV/R

No funciÃ³n de control de voz.





Original	Sustituto	Original	Sustituto
	Home		Exit
	Vol+		Exit
	Vol-		
	Recall		
	Mute		
	CH+		
	CH-		
	Audio		
	[...]		
	Help		
	<<		
	Play		
	>>		
	Rec		
	Pause		

No funciÃ³n de control de voz.

