


 
 



 
 


 










 
 
 








Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [i+]	 DISPLAY INFO Info
 [=]	 REPEAT TEXT Text
 Google Play	 SHIFT + APP MEDIA Shift + Media
 Netflix	 APP MEDIA Media

Original	Sustituto
 Red	 A Red
 Green	 B Green
 Yellow	 C Yellow
 Blue	 D Blue
 GUIDE	 GUIDE Guide
 REC LIST	 DISC NAV LIST List
 Input	 TIMER AV AV
 *	 TOP MENU MENU Menu
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 OK Ok
 BACK	 RETURN BACK Back
 TV	 SEARCH TV/R TV/R



No funciÃ³n de control de voz.



Original	Sustituto	Original	Sustituto
	Home		Smart
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Recall		Pre Ch
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Audio		Dual
	[...]		Subt
	Help		D. Menu
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Pause		Pause

No funciÃ³n de control de voz.

