 





 





 
 
 
 

 

 

 
 
 
 
 




 
 

 






Original	Sustituto
 Power	 Power
 D/A Input	 Shift + AV
 Tv/Radio	 TV/R
 Input	 AV
 Bright -	 Shift + Left
 Bright +	 Shift + Right
 Simplink	 Media
 Text	 Text
 Info	 Info
 Live TV	 Shift + Smart
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Stop	 Stop
 Play	 Play
 Pause	 Pause

Original	Sustituto
 Rec	 Rec
 I<<	 I<<
 <<	 <<
 >>	 >>
 >>I	 >>I
 Back	 Back
 DVR	 Smart
 Menu	 Menu
 Exit	 Exit
 Guide	 Guide
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -



 

 





 


 









 
 
 
 


 





 

 

 




 

 

 



Original	Sustituto	Original	Sustituto
	FAV		Pre Ch
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Q.View		D. Menu
	[≡x]/Update		Eject

Original	Sustituto	Original	Sustituto
	[≡i]/Index		Shift + Info
	[≡o]/Time		Shift + Exit
	Sleep		Sleep
	[≡+]/Hold		3D
	[≡?]/Reveal		Options
	Subtitle		Subt
	Ratio		Format
	I/II		Dual





Original		Sustituto		Original		Sustituto	
	Power		Power		4		4
	Stop		Stop		5		5
	Play		Play		6		6
	Pause		Pause		7		7
	I<<		I<<		8		8
	<<		<<		9		9
	>>		>>		0		0
	>>I		>>I				
	Menu		Menu				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	1		1				
	2		2				
	3		3				





Original	Sustituto
Power	Power
Input	AV
Stop	Stop
Play	Play
Pause	Pause
Rec	Rec
<<	<<
>>	>>
PR+	Ch +
PR-	Ch -
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Original	Sustituto
8	8
9	9
0	0

