



Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Picture	 Picture / Format
 Sound	 Sound / Title
 Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ
 EPG	 Guide / EPG / -/--
 FAV	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9



 





Original	Sustituto
 CHN List	 Smart / List
 0	 0
 Return / Back	 Back / Return
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 TV / Radio	 TV/Radio /
 Vol +	 Vol+
 Home	 D.Menu / Top
 PR +	 CH+ / Page+
 Vol -	 Vol-
 PR -	 CH- / Page-





Original	Sustituto
 Rec	 Rec / Rec Mode
 Sleep	 Sleep / Timer
 Info	 Info / Angle
 Play/Pause / Index	 Play / Slow
 Play/Pause / Index	 Pause / Step / Freeze
 << / Reveal	 << / Tune-
 >> / Mix	 >> / Tune+
 Stop / Cancel	 Stop / Hold
 I<< / Size	 I<< / Preset-
 >>I / Sub-Page	 >>I / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 I/II / Nicam	 Audio / Lang I/II
 Text	 Text / Goto
 Freeze / Hold	 Shift + Stop / Hold

Hold

Original	Sustituto
 PVR List	 Display / Media
 Quick	 Setup / OPT /
 AD	 Eject / Surround
 3D	 Shift + 3

