


 

 

 


 
 






 

 

 















Original	Sustituto
 Power	 Power
 3D	 3D
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Prog +	 Ch +
 Prog -	 Ch -
 Vol +	 Vol +
 Vol -	 Vol -

Original	Sustituto
 Up / CH +	 Up
 Down / CH -	 Down
 Right / Vol +	 Right
 Left / Vol -	 Left
 OK	 Ok
 Menu	 Menu
 Info	 Info
 EPG	 Guide
 Exit	 Exit
 List	 List
 TXT	 Text
 S - T	 Dual
 TV / R	 TV/R
 Timer	 AV
 Audio	 Shift + Dual
 Play/Pause	 Play
 Stop	 Stop





Original		Sustituto		Original		Sustituto	
	Play/Pause		Pause				
	Rec		Rec				
	Back		Back				
	Red / <<<		Red				
	Red / <<<		<<<				
	Green / >>>		Green				
	Green / >>>		>>>				
	Yellow / I<<<		Yellow				
	Yellow / I<<<		I<<<				
	Blue / >>>I		Blue				
	Blue / >>>I		>>>I				

