



 


 








Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute
	Audio		Dual
	TV / STB		Shift + TV/R
	TV / R		TV/R
	Sleep		Sleep
	SUB		Subt
	TXT		Text
	P / N		Shift + 1
	Recall		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PGUP		Vol +
	PGDN		Vol -
	SAT		Shift + AV
	FAV +		Ch +
	FAV -		Ch -
	EPG		Guide
	Fav		Shift + Pre Ch
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit





Original	Sustituto
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Pause	 Pause
 Zoom	 Eject
 Edit	 Format
 Info	 Info
 USB	 AV
 MP3	 Media
 JPEG	 Smart
 PVR List	 List
 A - B	 Back
 T.S.	 Shift + 2
 Goto	 Options
 Stop	 Stop
 Rec	 Rec

Original	Sustituto
 <<	 <<
 >>	 >>
 Play / Pause	 Play
 > <	 Shift + Pause
 <<	 <<
 >>	 >>

