











Original	Sustituto
[=]	Subt
Power On	Power
Power Off	+ Shift + Power
Mute	Mute
Menu / SPKR.	MENU Menu
DVD	+ Shift + 2
CD	+ Shift + 3
Tape	+ Shift + 4
Vid 1 / VCR	+ Shift + 5
Vid 2 / TV	+ Shift + 6
CBL / SAT	+ Shift + 7
AM / FM	+ Shift + 8
6 CH.	+ Shift + 9
PR + / Sleep	CH Ch +
PR - / Surr.	- Ch -
Test	TEXT Text
Night	SLEEP Sleep

Original	Sustituto
Input	AV AV
Vol +	Vol +
Vol -	Vol -
CH. / [=?]	GUIDE Guide
Up	Up
Right	Right
Down	Down
Left	Left
Set	Ok
Digital / [=X]	EXIT Exit
Delay / Normal	BACK Back
1	1
2	2
3	3
4	4
5	5
6	6





Original	Sustituto
 7	 7
 8	 8
 9	 9
 0	 0
 Tun-M. / Hold	 TV/R
 Mem. / Size	 3D
 Red / Tuning +	 Red
 Red / Tuning +	 Shift + Up
 Green / Direct	 Green
 Yellow / Clear	 Yellow
 Blue / Preset +	 Blue
 Blue / Preset +	 Shift + Right
 Tuning -	 Shift + Down
 OSD	 Options
 RDS / D.Skip	 Smart
 Preset -	 Shift + Left
 <<	 <<

Original	Sustituto
 Play / Play	 Play
 >>	 >>
 Rec	 Rec
 Stop	 Stop

