

 
 
 
 


 








 



 









Original	Sustituto	Original	Sustituto
 Power	 Power	 Left	 Left
 Red/F1	 Red	 OK	 Ok
 Green/F2	 Green	 Vol+	 Vol +
 Yellow/F3	 Yellow	 Vol-	 Vol -
 Blue/F4	 Blue	 Mute	 Mute
 Text	 Text	 EPG	 Guide
 Subtitle	 Subt	 Info	 Info
 FAV	 Pre Ch	 Recall	 Back
 Menu	 Menu	 1	 1
 Exit	 Exit	 2	 2
 Tv/Radio	 TV/R	 3	 3
 A/B	 Dual	 4	 4
 P+	 Ch +	 5	 5
 P-	 Ch -	 6	 6
 Up	 Up	 7	 7
 Down	 Down	 8	 8
 Right	 Right	 9	 9



