







 







 

 

 



 

 



 

 

 

 

 





Original	Sustituto
 Power	 Power
Home	 Shift + Menu /
 e/Energy/Savin	 Sleep / Timer
 Input	 AV / Input / RDS
 AV Mode	 Shift + AV / Input / RDS
 TV/RAD	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 Smart / List

Original	Sustituto
 Vol+	 Vol+
 Q.View	 Display / Media
 FAV/Mark	 Fav / Marker / PC
 Vol-	 Vol-
 Ratio	 Picture / Format
 Mute	 Mute / Dimmer
 Guide	 Guide / EPG / -/-
 Home	 Menu / Home
 P + / Page +	 CH+ / Page+
 Q.Menu	 D.Menu / Top
 P - / Page -	 CH- / Page-
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 OK
 Back	 Back / Return





Original	Sustituto	Original	Sustituto
Info	Info / Angle		
Exit	Exit / Cancel / Clear		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Text	Text / Goto		
Subtitle	Subtitle / EQ		
Stop	Stop / Hold		
Play	Play / Slow		
T.Opt	Setup / OPT /		
Pause	Pause / Step / Freeze		
<<	<< / Tune-		
>>	>> / Tune+		
AD	Audio / Lang I/II		

