



 
 
 
 
 

 

 

 
 





 


 

 

 
 

 

 

 
 

 
 
 

 
 
 



 
 
 

 



 
 
 
 

 
 

 

 


 

 
 
 
 



 
 



Original	Sustituto	Original	Sustituto
 Standby	 Power	 Source / AV	 AV
 TV / Radio	 TV/R	 Info	 Info
 TV Guide	 Guide	 Up	 Up
 Mute	 Mute	 Right	 Right
 ATV	 Shift + Smart	 Down	 Down
 USB	 Media	 Left	 Left
 DVD	 Smart	 OK	 Ok
 Eject	 Eject	 Menu	 Menu
 Rec	 Rec	 Exit	 Exit
 Rec List	 Shift + Rec	 1	 1
 I<<	 I<<	 2	 2
 >>I	 >>I	 3	 3
 Stop	 Stop	 4	 4
 <<	 <<	 5	 5
 >>	 >>	 6	 6
 Play / Pause	 Play	 7	 7
 Play / Pause	 Pause	 8	 8





Original	Sustituto
	9
	0
	RETURN BACK
	FAV PRE-CH
	+ VOL
	VOL -
	AD SUBT
	PICTURE FORMAT
	SOUND DUAL
	PROG SLEEP
	+ CH
	CH -
	A
	B
	C
	D
	SHIFT + REPEAT TEXT

Original	Sustituto
	D.Dis
	SHIFT + DISPLAY INFO
	SHIFT + ZOOM Eject
	ECO 3D
	SHIFT + POWER Shift + Power
	REPEAT TEXT
	SETTINGS OPT
	E-MANUAL D.MENU
	DISC NAV LIST
	SHIFT + PAUSE Shift + Pause

