 











 





 


 
 




Original		Sustituto		Original		Sustituto	
	Power		Power		Yellow		Yellow
	1		1		EPG		Guide
	2		2		Tv/AV		AV
	3		3		Text		Text
	4		4		FAV+/P+		Ch +
	5		5		FAV-/P-		Ch -
	6		6		Info		Info
	7		7		Up/CH+		Up
	8		8		Down/CH-		Down
	9		9		Right		Right
	0/Multivideo		0		Left		Left
	Tv/Radio		TV/R		OK		Ok
	Mute		Mute		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Blue		Blue		Menu		Menu
	Green		Green		Exit		Exit
	Red		Red		A/B		Smart





Original		Sustituto		Original		Sustituto	
	USB		Media				
	Rec		Rec				
	Play		Play				
	Pause/PP		Pause				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	Stop		Stop				
	FAV		Pre Ch				
	Recall		Back				

