



 

 







 

 
 
 
 
 



 
 

 





 




Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PC	 Pre Ch
 [i+]	 Info
 Split Screen	 Options
 Split Screen Swap	 3D
 PIP Swap	 Shift + Back
 Tv/DTV	 TV/R

Original	Sustituto
 P +	 Ch +
 P -	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Source Power	 AV
 Return	 Back
 Home	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Exit	 Exit
 EPG / DVD Top Menu / Guide	 Guide
 Red/Rec	 Red
 Green/Pause	 Green














 




 



 
 



 










 










 


 

 

 
 

 
 


 






Original	Sustituto		
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PC		Pre Ch
	Source Power		AV
	Mute		Mute
	Vol +		Vol +
	Vol -		Vol -
	Up		Up

Original	Sustituto		
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Menu		Menu
	DVD Top		D. Menu
	Return		Back
	Play		Play
	Stop		Stop
	Pause		Pause
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	Input 1		Shift + 1
	Input 2		Shift + 2
	Input 3		Shift + 3





 


 
 

 

 



 

 


 

 
 







 






 



 





 








 
 




Original	Sustituto	Original	Sustituto
 Power	 Power	 P +	 Ch +
 Source Power	 AV	 P -	 Ch -
 1	 1	 Menu	 Menu
 2	 2	 Exit	 Exit
 3	 3	 DVD Top Menu	 D. Menu
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 Input 1	 Shift + 1
 0	 0	 Input 2	 Shift + 2
 PC	 Pre Ch	 Input 3	 Shift + 3
 [i+]	 Info	 Input 4	 Shift + 4
 Mute	 Mute	 Input 5	 Shift + 5
 Vol +	 Vol +		
 Vol -	 Vol -		





Original	Sustituto	Original	Sustituto
	Power		Power
	Source Power		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PC		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	P +		Ch +
	P -		Ch -
	Mute		Mute
	Play		Play
	Stop		Stop
	Pause		Pause
	Rec		Rec
	>>		>>
	<<		<<
	Input 1		Shift + 1
	Input 2		Shift + 2
	Input 3		Shift + 3
	Input 4		Shift + 4
	Input 5		Shift + 5

