



















































Original	Sustituto
 Power	 Power
 Open/Close	 Eject / Surround
 Display/Progra	 Shift + Display / Media
 Display/Progra	 TV/Radio /
 Record	 Rec / Rec Mode
 RPT/RND	 Blue / Prime Video / Random
 RPT/RND	 Green / APP / Repeat
 Clock	 Sleep / Timer
 iPod	 Shift + 7
 Audio In	 Audio / Lang I/II
 CD	 Shift + 3
 USB	 Shift + 8
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Tuning/Group/PT	 >> / Tune+
 I<<	 I<< / Preset-
 OK	 OK

Original	Sustituto
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Tuning/Group/PT	 << / Tune-
 Display Mode	 Display / Media
 News Info	 Info / Angle
 PTY Search	 Red / Netflix / Search
 FM	 Smart / List
 1	 1
 2	 2
 3	 3
 Sound Mode	 Sound / Title
 4	 4
 5	 5
 6	 6
 HBS	 Menu / Home
 7	 7
 8	 8





Original	Sustituto
9	9
Vol+	Vol+
0	0
>=10	Guide / EPG / -/--
Muting	Mute / Dimmer
Vol-	Vol-

Original	Sustituto

