
 


 

 



 


 
 

 







Original	Sustituto
 Power	 Power
 Mute	 Mute
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 I> Step	 Shift + Pause
 Rec / B.Mark	 Rec
 << / F1	 <<
 >> / F2	 >>
 I<< / F3	 I<<
 >>I / F4	 >>I
 OPT	 Options
 EPG / Seek	 Guide
 FAV / Repeat	 Shift + Text
 FAV / Repeat	 Pre Ch
 SAT / (A-B)	 AV
 RED / SUB.T	 Red

Original	Sustituto
 RED / SUB.T	 Subt
 Green / Txt	 Green
 Green / Txt	 Text
 Yellow / Timer	 Yellow
 Yellow / Timer	 Shift + AV
 Blue / Audio	 Blue
 Blue / Audio	 Dual
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Recall	 Back
 Info	 Info
 Vol +	 Vol +





	Original	Sustituto
	Vol -	Vol -
	APPS	HOME SMART Smart
	APPS	SHIFT + APP MEDIA Shift + Media
	USB	APP MEDIA Media
	CH + / Page +	CH + Ch +
	CH - / Page -	CH - Ch -
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0 / Zoom	0
	0 / Zoom	ZOOM Eject

	Original	Sustituto
	VF	PICTURE FORMAT Format
	TV / Radio	SEARCH TVR TV/R

