



Original	Sustituto
Power	Power
VCR	Shift + 2
DVD	Shift + 1
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Input Select	AV
Display / CLK/CNT	Info
Open/Close / Eject	Eject
TV / VCR	TV/R

Original	Sustituto
Clear / Count. Reset	Exit
Blank Search	Green
Top Menu	Shift + Menu
Menu	Menu
Return	Back
Zoom	Shift + Eject
Angle	Format
Subtitle	Subt
Audio	Dual
Instant Replay	Shift + Play
Play	Play
<< REW	<<
FWD >>	>>
Slow	Shift + Pause
Stop	Stop
Pause Step / Still	Pause
I<< Skip	I<<





Original	Sustituto	Original	Sustituto
Skip >>	>>		
Repeat	TEXT		
Marker	FAV PRE-CH		
i / Set Up / VCR Menu	SETTINGS OPT		
Up / PR/TRK +	Up		
Up / PR/TRK +	+ CH		
Down / PR/TRK -	Down		
Down / PR/TRK -	CH -		
Right	Right		
Left	Left		
OK / Enter	OK		
Auto TRK	HOME SMART		
A-B RPT / SP/LP	+ VOL		
Random / Inst	VOL -		
Search	SHIFT + SEARCH TV/R		
Program	PROG SLEEP		
Rec / OTR.	REC MODE		

