





 

 

 

 

 

 

 
 
 

 

 



 

 

 



 



 

 



 



 

 



 

 

 

 
 






 




 




 

 
 

 





 








Original		Sustituto		Original		Sustituto	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol +		Vol+
	6		6		List		Smart / List
	7		7		CH +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		CH -		CH- / Page-
	Source		AV / Input / RDS		Fav		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	Info		Info / Angle		Index		D.Menu / Top
	DMP		Display / Media		Recall		Back / Return
	Up		Up		Red / <<		Red / Netflix / Search
	EPG		Guide / EPG / -/-		Red / <<		<< / Tune-





Original	Sustituto
 Green / >>	 >> / Tune+
 Green / >>	 Green / APP / Repeat
 Yellow / I<<	 I<< / Preset-
 Yellow / I<<	 Yellow / YouTube / Repeat
 Blue / >>I	 >>I / Preset+
 Blue / >>I	 Blue / Prime Video / Random
 Text / Play/Pause	 Text / Goto
 Text / Play/Pause	 Play / Slow
 Text / Play/Pause	 Pause / Step / Freeze
 Stop / Still	 Stop / Hold
 Timer / Subtitle	 Subtitle / EQ
 Timer / Subtitle	 Shift + Sleep / Timer
 Size / Aspect	 Picture / Format
 Size / Aspect	 Zoom / Size
 Cancel [≡X]	 Shift + Exit / Cancel / Clear
 Radio	 TV/Radio /
 Audio / I/II	 Audio / Lang I/II

Original	Sustituto
 Rec	 Rec / Rec Mode

