




Original	Sustituto	Original	Sustituto
 Power	 Power	 0	 0
 Mute	 Mute	 Menu	 Menu
 FAV	 Pre Ch	 Exit	 Exit
 Subtitle	 Subt	 EPG	 Guide
 Info	 Info	 Goto	 Shift + Guide
 TTX	 Text	 Up	 Up
 Recall	 Back	 Down	 Down
 List	 List	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Vol +	 Vol +
 4	 4	 Vol -	 Vol -
 5	 5	 Pg Up	 Shift + Up
 6	 6	 PG Dn	 Shift + Down
 7	 7	 CH +	 Ch +
 8	 8	 CH -	 Ch -
 9	 9	 >>	 >>





Original	Sustituto	Original	Sustituto
	<<		<<
	>>		>>
	I<<		I<<
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	Lang		Dual
	Timeshift		Smart
	Tv/Radio		TV/R
	Repeat		Shift + Text
	Red / Zoom		Red
	Green / Aspect		Green
	Yellow / V-Format		Yellow
	Blue / Timer		Blue

Original	Sustituto	Original	Sustituto

