



Original	Sustituto
Power	Power
Mute	Mute / Dimmer
Play	Play / Slow
Pause/[≡]	Pause / Step / Freeze
Stop/[≡+]	Stop / Hold
Rec/[≡◆]	Rec / Rec Mode
<</[≡o]	<< / Tune-
<</[≡i]	<< / Preset-
>> /[≡?]	>> / Preset+
>>/[≡x]	>> / Tune+
Info	Info / Angle
OI/II/Audio	Audio / Lang I/II
[≡]	Text / Goto
←/<x]	Fav / Marker / PC
1	1
2	2
3	3

Original	Sustituto
4	4
5	5
6	6
7	7
8	8
9	9
*	Setup / OPT /
0	0
Up	Up
[→]	AV / Input / RDS
Left	Left
OK	OK
Right	Right
Down	Down
Netflix	Shift + Red / Netflix /
You Tube	Shift + Yellow / YouTube /
Vol+	Vol+





Original	Sustituto
Power	Power
Mute	Mute / Dimmer
Play	Play / Slow
Pause [/≡]	Pause / Step / Freeze
Stop/[≡+]]	Stop / Hold
Rec/[≡◆]	Rec / Rec Mode
<</[≡o]	<< / Tune-
<</[≡i]	<< / Preset-
>> /[≡?]	>> / Preset+
>>/[≡x]	>> / Tune+
Info	Info / Angle
O) /II/Audio	Audio / Lang I/II
[≡]	Text / Goto
←/<x]	Fav / Marker / PC
1	1
2	2
3	3

Original	Sustituto
4	4
5	5
6	6
7	7
8	8
9	9
*	Setup / OPT /
0	0
[→]	AV / Input / RDS
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Netflix	Shift + Red / Netflix /
YouTube	Shift + Yellow / YouTube /
Vol+	Vol+



