

 









Original	Sustituto
	Smart / List
	Text / Goto
	Display / Media
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Back / Return
	Fav / Marker / PC

Original	Sustituto
	Subtitle / EQ
	Info / Angle
	Picture / Format
	Vol+
	Shift + CH+ /
	CH+ / Page+
	Vol-
	Shift + CH- /
	CH- / Page-
	Audio / Lang I/II
	Shift + Audio / Lang I/II
	Sound / Title
	Guide / EPG / -/-
	Up
	Left
	OK
	Right





Original	Sustituto
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Timer	Sleep / Timer
Aspect	Zoom / Size

Original	Sustituto

