


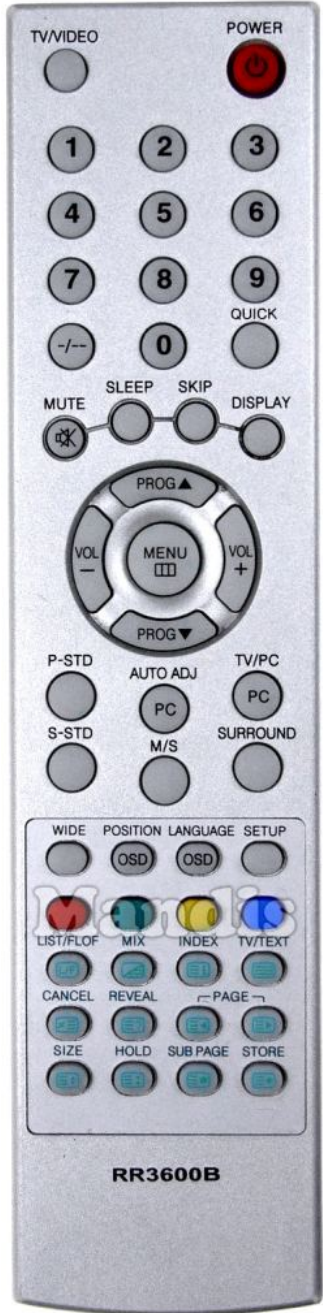

| Original | Sustituto |
|------------|---------------|
| Power | Power |
| TV / Video | AV |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| /-- | GUIDE Guide |
| Quick | PRE-CH Pre Ch |
| Mute | Mute |
| Sleep | SLEEP Sleep |
| Skip | EXIT Exit |

| Original | Sustituto |
|---------------|----------------|
| Display | Info |
| Up / Prog + | Ch + |
| Up / Prog + | Up |
| Down / Prog - | Ch - |
| Down / Prog - | Down |
| Right / Vol + | Vol + |
| Right / Vol + | Right |
| Left / Vol - | Vol - |
| Left / Vol - | Left |
| Menu | Menu |
| Menu | Ok |
| P-STD | Shift + Format |
| S-STD | Dual |
| PC Auto ADJ | Smart |
| PC / TV/PC | Media |
| M / S | TV/R |
| Surround | Shift + Dual |





| Original | Sustituto |
|--------------|-----------------|
| Wide | Format |
| OSD Position | 3D |
| OSD Language | + Shift + 3D |
| Setup | Options |
| Red | Red |
| Green | Green |
| List / FLOF | List |
| Yellow | Yellow |
| Blue | Blue |
| Mix | + Shift + Text |
| Index | + Shift + Info |
| TV / Text | Text |
| Cancel | Back |
| Subpage | Subt |
| Reveal | Play |
| Page - | I<< |
| Page + | >>I |

| Original | Sustituto |
|----------|------------------|
| Size | Eject |
| Hold | Stop |
| Store | + Shift + Smart |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

