


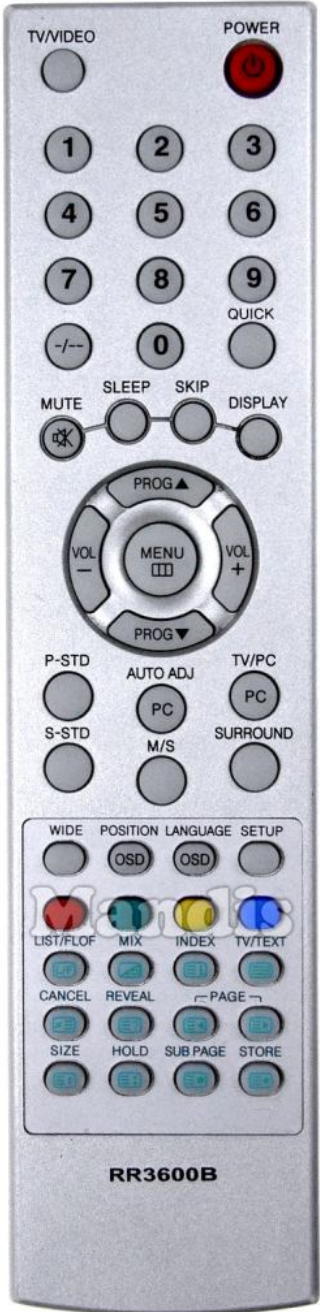

Original	Sustituto
Power	Power
TV / Video	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
/--	GUIDE Guide
Quick	PRE-CH Pre Ch
Mute	Mute
Sleep	SLEEP Sleep
Skip	EXIT Exit

Original	Sustituto
Display	Info
Up / Prog +	Ch +
Up / Prog +	Up
Down / Prog -	Ch -
Down / Prog -	Down
Right / Vol +	Vol +
Right / Vol +	Right
Left / Vol -	Vol -
Left / Vol -	Left
Menu	Menu
Menu	Ok
P-STD	Shift + Format
S-STD	Dual
PC Auto ADJ	Smart
PC / TV/PC	Media
M / S	TV/R
Surround	Shift + Dual





Original	Sustituto
Wide	Format
OSD Position	3D
OSD Language	Shift + 3D
Setup	Options
Red	Red
Green	Green
List / FLOF	List
Yellow	Yellow
Blue	Blue
Mix	Shift + Text
Index	Shift + Info
TV / Text	Text
Cancel	Back
Subpage	Subt
Reveal	Play
Page -	I<<
Page +	>>I

Original	Sustituto
Size	Eject
Hold	Stop
Store	Shift + Smart

