



Original	Sustituto	Original	Sustituto
Power	Power	Right / Vol +	Vol +
SUB-T	Subt	Left / Vol -	Left
Lang	Dual	Left / Vol -	Vol -
Mute	Mute	OK	Ok
EPG	Guide	FAV	Pre Ch
Goto	Smart	TV / Radio	TV/R
Page +	Shift + Ch +	Recall	Back
Page -	Shift + Ch -	Info	Info
TTX	Text	1	1
Repeat	Shift + Text	2	2
Menu	Menu	3	3
Exit	Exit	4	4
Up / CH +	Up	5	5
Up / CH +	Ch +	6	6
Down / CH -	Down	7	7
Down / CH -	Ch -	8	8
Right / Vol +	Right	9	9





Original		Sustituto		Original		Sustituto	
	Power		Power		OK		Ok
	Mute		Mute		FAV		Pre Ch
	EPG		Guide		TV / Radio		TV/R
	Info		Info		Text		Text
	Audio		Dual		Goto		Smart
	Recall		Back		1		1
	Subtitle		Subt		2		2
	Menu		Menu		3		3
	Exit		Exit		4		4
	Up / CH +		Up		5		5
	Up / CH +		Ch +		6		6
	Down / CH -		Down		7		7
	Down / CH -		Ch -		8		8
	Right / Vol +		Right		9		9
	Right / Vol +		Vol +		0		0
	Left / Vol -		Left		USB		Media
	Left / Vol -		Vol -		Rec		Rec



