



Original	Sustituto	Original	Sustituto
Power	Power	Right / Vol +	Vol +
SUB-T	Subt	Left / Vol -	Left
Lang	Dual	Left / Vol -	Vol -
Mute	Mute	OK	Ok
EPG	Guide	FAV	Pre Ch
Goto	Smart	TV / Radio	TV/R
Page +	Shift + Ch +	Recall	Back
Page -	Shift + Ch -	Info	Info
TTX	Text	1	1
Repeat	Shift + Text	2	2
Menu	Menu	3	3
Exit	Exit	4	4
Up / CH +	Up	5	5
Up / CH +	Ch +	6	6
Down / CH -	Down	7	7
Down / CH -	Ch -	8	8
Right / Vol +	Right	9	9





	Original	Sustituto	Original	Sustituto
		0		0
		<<		<<
		>>		>>
		<<		<<
		>>		>>
		Play		Play
		Pause / Timeshift		Pause
		Stop		Stop
		Rec		Rec
		Red / PVR		Red
		Green / V-Format		Green
		Green / V-Format		Format
		Yellow / Aspect		Yellow
		Yellow / Aspect		3D
		Blue / Timer		Blue





Original		Sustituto		Original		Sustituto	
	Power		Power		OK		Ok
	Mute		Mute		FAV		Pre Ch
	EPG		Guide		TV / Radio		TV/R
	Info		Info		Text		Text
	Audio		Dual		Goto		Smart
	Recall		Back		1		1
	Subtitle		Subt		2		2
	Menu		Menu		3		3
	Exit		Exit		4		4
	Up / CH +		Up		5		5
	Up / CH +		Ch +		6		6
	Down / CH -		Down		7		7
	Down / CH -		Ch -		8		8
	Right / Vol +		Right		9		9
	Right / Vol +		Vol +		0		0
	Left / Vol -		Left		USB		Media
	Left / Vol -		Vol -		Rec		Rec





Original	Sustituto	Original	Sustituto
Stop	Stop		
Play / Pause	Play		
Play / Pause	Pause		
<<	<<		
>>	>>		
<<	<<		
>>	>>		
---	+ Shift + 1		
---	+ Shift + 2		
---	+ Shift + 3		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		

