



Original	Sustituto
Power	Power
Eject	Eject / Surround
Tv/VCR	TV/Radio /
Mute	Mute / Dimmer
i/Menu	Menu / Home
Up	Up
Prog Up	CH+ / Page+
AV	AV / Input / RDS
Left	Left
Vol-	Vol-
OK/CLK/CNT	OK
Right	Right
Vol+	Vol+
Clear	Exit / Cancel / Clear
Down	Down
Prog Down	CH- / Page-
CM Skip	Back / Return

Original	Sustituto
LP	Smart / List
Stop	Stop / Hold
P/Still	Pause / Step / Freeze
Rec/ITR	Rec / Rec Mode
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
1	1
2	2
3	3
eZ Power Off	Red / Netflix / Search
4	4
5	5
6	6
eZ Repeat	Green / APP / Repeat
7	7
8	8



















Original	Sustituto	Original	Sustituto
9	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0
C.LOCK	C.Lock	MEDIA DISPLAY	Display / Media





Original		Sustituto	
	Power		Power
	Mute		Mute / Dimmer
	Tv AV		AV / Input / RDS
	Prog Up		CH+ / Page+
	Prog Down		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-

Original		Sustituto	



Mandis

Mandis