



	Original	Sustituto	Original	Sustituto
	Power			<<
	1			Play
	2			>>
	3			I<<
	4			Pause
	5			>>I
	6			Stop
	7			Menu/Pop-Up
	8			X/Exit
	9			Option
	0			Return
	Cancel			Top Menu
	Audio			Shift + Menu
	Open/Close			Media
	Status			Smart
	Miracast			Up
	Internet			Down
				Right/I>





Original	Sustituto	Original	Sustituto
Left/<l	Left		
OK	Ok		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Power Tv	SHIFT + Shift + Power		
AV Input Tv	AV		
Vol+ Tv	Vol +		
Vol- Tv	Vol -		

