









 

 

 

 





















Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 Recall	 Back / Return
 PMode	 Picture / Format
 I / II	 Audio / Lang I/II
 EPG	 Guide / EPG / -/--

Original	Sustituto
 Sleep	 Sleep / Timer
 Input	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 FAV	 Fav / Marker / PC
 Vol +	 Vol+
 ADD / DEL	 Shift + Back / Return
 PR +	 CH+ / Page+
 Vol -	 Vol-
 Cancel	 Shift + Exit / Cancel / Clear
 PR -	 CH- / Page-
 Red	 Red / Netflix / Search





Original	Sustituto
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Play / Slow
	Shift + Play /
	Stop / Hold
	Setup / OPT /
	Eject / Surround
	Shift + Left arrow / Preset-
	Left arrow / Preset-
	Fast Left arrow / Tune-
	Zoom / Size
	Sound / Title
	Right arrow / Preset+
	Shift + Right arrow / Preset+
	Right arrow / Tune+
	Shift + Rec / Rec Mode

Original	Sustituto
	Rec / Rec Mode
	Smart / List

