
















 





 

 
 
 


 

 
 
 
 
 

 
 

 
 
 
 

 


 

Original	Sustituto
 Power	 Power
 TV / AV	 AV / Input / RDS
 TV/TXT	 Text / Goto
 Cancel	 Shift + Exit / Cancel / Clear
 Reveal	 Display / Media
 DTV	 D.Menu / Top
 Hold	 Stop / Hold
 Size	 Shift + Zoom /
 Subpage	 Eject / Surround
 Index	 Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 CH+	 CH+ / Page+
 Menu	 Menu / Home
 Vol+	 Vol+

Original	Sustituto
 CH-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original	Sustituto
	PROGRAM TV/RADIO TV/Radio /
	HDMI - BAT 0 0
	RETURN BACK Back / Return
	FORMAT PICTURE Picture / Format
	TITLE SOUND Sound / Title
	LANG /II AUDIO Audio / Lang I/II
	DIMMER MUTE Mute / Dimmer
	TIMER SLEEP Sleep / Timer
	ANGLE INFO Info / Angle
	SIZE ZOOM Zoom / Size
	STEP - FREEZE II Pause / Step / Freeze
	GUIDE EPG Guide / EPG / -/--
	PC FAV MARKER Fav / Marker / PC
	PRESET- I<< / Preset-
	PRESET+ >>I / Preset+
	EQ SUBTITLE Subtitle / EQ
	SHIFT + TIMER SLEEP Shift + Sleep / Timer

Original	Sustituto
	QUICK START Quick Start
	OPT-TOOLS SETUP Setup / OPT /

