


 











 





| Original | Sustituto |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  TV / R |  TV/Radio / |
|  Home |  D.Menu / Top |
|  FAV |  Fav / Marker / PC |
|  Back |  Back / Return |
|  Audio |  Audio / Lang I/II |

| Original | Sustituto |
|---|---|
|  Info |  Info / Angle |
|  EPG |  Guide / EPG / -/- |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  Vol + |  Vol+ |
|  Vol - |  Vol- |
|  P + |  Shift + CH+ / |
|  List |  Smart / List |
|  P - |  Shift + CH- / |
|  CH + |  CH+ / Page+ |
|  USB |  Shift + 8 |
|  Text |  Text / Goto |



