







Original	Sustituto
TV	TV/Radio /
TV	Shift + 1
Audio	Audio / Lang I/II
TV/VCR	AV / Input / RDS
Power	Power
1	1
2	2
3	3
Text	Text / Goto
4	4
5	5
6	6
Subtitle	Subtitle / EQ
7	7
8	8
9	9
Sound	Sound / Title

Original	Sustituto
Alt	Fav / Marker / PC
0	0
i	Info / Angle
Setup	Setup / OPT /
Exit	Exit / Cancel / Clear
Up	Up
Navigator	Smart / List
Left	Left
OK	OK
Right	Right
Vol +	Vol+
Down	Down
CH +	CH+ / Page+
Vol -	Vol-
Mute	Mute / Dimmer
Recall	Back / Return
CH -	CH- / Page-





	Original	Sustituto	Original	Sustituto
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	EPG	 Guide / EPG / -/--		
	Check	 Display / Media		

