 


 




 





 



 

 

 


 







Original	Sustituto
	 Power
	 Mode DVB
	 Direct TV Rec
	 Guide
	 TV / AV
	 Up
	 Left
	 OK
	 Right
	 Down
	 Menu
	 Exit
	 Red
	 Green
	 Yellow
	 Blue
	 Text

Original	Sustituto
	 STTL / FP
	 Index
	 Hold
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0 / VCR
	 C
	 i
	 CH +
	 CH -



