




 

 

 



 











 

 








 
 

 











 

 

 
 

 
 









Original	Sustituto
 STB Power	 Power
 Mute	 Mute
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Recall	 Back
 Up / CH +	 Up
 Down / CH -	 Down

Original	Sustituto
 Right / Vol +	 Right
 Left / Vol -	 Left
 OK	 Ok
 Up / CH +	 Ch +
 Down / CH -	 Ch -
 Right / Vol +	 Vol +
 Left / Vol -	 Vol -
 Menu	 Menu
 EPG	 Guide
 FAV	 Pre Ch
 Exit	 Exit
 Subt	 Subt
 Info	 Info
 TTX	 Text
 TV / Radio	 TV/R
 Page -	 Shift + Down
 Page +	 Shift + Up





Original	Sustituto	Original	Sustituto
 V-Format	 Format	 TV CH -	 Shift + Ch -
 PVR	 Media	 TV CH +	 Shift + Ch +
 Red	 Red	 TV OK	 Shift + Ok
 Green	 Green	 TV Source	 AV
 Yellow	 Yellow		
 Blue	 Blue		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Rec	 Rec		
 <<	 <<		
 >>	 >>		
 I<<	 I<<		
 >>I	 >>I		
 TV Power	 Shift + Power		
 TV Vol -	 Shift + Vol -		
 TV Vol +	 Shift + Vol +		

