

 


 

 

 





 



 

 

 














Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 GUIDE Guide
 Recall	 BACK Back
 Vol +	 Vol +
 Vol -	 Vol -
 Nicam	 SMART Smart

Original	Sustituto
 Display	 INFO Info
 CH +	 CH + Ch +
 CH -	 CH - Ch -
 Up	 Up
 Left	 Left
 Enter	 OK Ok
 Right	 Right
 Down	 Down
 LCD Menu	 TOP MENU Menu
 Exit	 CLEAR EXIT Exit
 Input	 TIMER AV AV
 PMode	 SHIFT + PICTURE FORMAT Shift + Format
 SMode	 SHIFT + SOUND DUAL Shift + Dual
 Sleep	 PROG SLEEP Sleep
 Fav	 FAV PRE-CH Pre Ch
 Fav -	 SHIFT + Down Shift + Down
 Fav +	 SHIFT + Up Shift + Up



