



 




 







Original	Sustituto
 Power	 Power
 I<<	 I<< / Preset-
 Eject	 Eject / Surround
 <<	 << / Tune-
 >>	 >> / Tune+
 >>	 >>  / Preset+
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 TV/TXT /	 Setup / OPT /
 TV/TXT /	 Shift + Goto Text / Text /
 Cancel / Zoom	 Shift + Exit / Cancel / Clear
 Reveal / Subtitle	 Shift + Subtitle / EQ
 Stop	 Stop / Hold
 Hold / Menu	 Shift + Hold / Stop /
 Hold / Menu	 Shift + Home / Menu /
 Size / Angle	 Zoom / Size
 Subpage / Title	 Shift + Sound / Title

Original	Sustituto
 Index / Goto	 Info / Angle
 Red / Program	 Red / Netflix / Search
 Green / Slow	 Green / APP / Repeat
 Yellow / Repeat	 Yellow / YouTube / Repeat
 Blue / A-B	 Blue / Prime Video / Random
 CH +	 CH+ / Page+
 Sys-Menu	 Menu / Home
 Vol +	 Vol+
 CH -	 CH- / Page-
 Input / Sourc	 AV / Input / RDS
 Vol -	 Vol-
 DVD	 Shift + 2
 DVD-Setup	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right





Original	Sustituto	Original	Sustituto
 Down	 Down	 Nicam / A2	 Audio / Lang I/II
 DVB	 Smart / List	 Mute	 Mute / Dimmer
 Sys-Exit	 Exit / Cancel / Clear	 Sleep	 Sleep / Timer
 1	 1	 TV / Radio	 TV/Radio /
 2	 2	 FAV	 Fav / Marker / PC
 3	 3	 Fav +	 Shift + CH+ /
 4	 4	 Fav -	 Shift + CH- /
 5	 5	 Pic. Format	 Shift + Picture / Format
 6	 6	 Subtitle	 Subtitle / EQ
 7	 7	 Text	 Text / Goto
 8	 8	 Display	 Display / Media
 9	 9	 Language	 Shift + Audio / Lang I/II
 -/--	 Shift + Guide / EPG / -/--	 EPG	 Guide / EPG / -/--
 0	 0		
 Recall	 Back / Return		
 Picture	 Picture / Format		
 Sound	 Sound / Title		

