

 


 



 


 

 

 


 



 

 


 







 

 


 

 






 




 

 

 





 






Original	Sustituto	Original	Sustituto
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Recall		Pre Ch
	V +		Vol +
	V -		Vol -
	Mute		Mute
	i		Info
	P +		Ch +
	P -		Ch -
	Menu		Menu
	Q.Menu		D. Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Back		Back
	Exit		Exit
	World		Smart
	Music/Camera/Ph		Media
	Guide		Guide
	Fav 1 / O		Shift + 1
	Fav 2 / Q		Shift + 2





Original		Sustituto		Original		Sustituto	
	[≡]/Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Lang		Dual				
	Dialog		Subt				
	-[O]-		Options				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

