

 






 


 

 

 
 

 



 

 


 







 

 


 
 






 

 


 

 




 







Original	Sustituto
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV	 TV/R
 Recall	 Pre Ch
 V +	 Vol +
 V -	 Vol -
 Mute	 Mute

Original	Sustituto
 i	 Info
 P +	 Ch +
 P -	 Ch -
 Menu	 Menu
 Q.Menu	 D. Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Back	 Back
 Exit	 Exit
 World	 Smart
 Music/Camera/Ph	 Media
 Guide	 Guide
 Fav 1 / O	 Shift + 1
 Fav 2 / Q	 Shift + 2





Original	Sustituto	Original	Sustituto
 [=]/Text	 Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Lang	 Dual		
 Dialog	 Subt		
 -[O]-	 Options		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

