

 






 



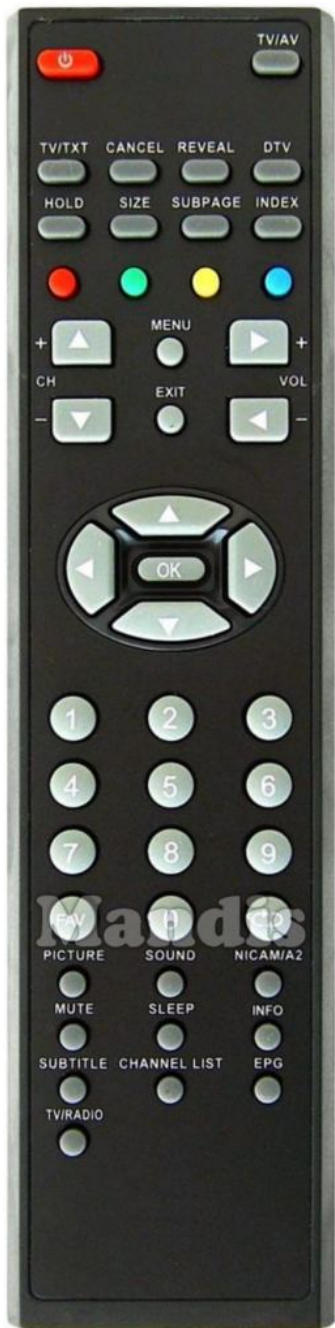 


Original	Sustituto
	 Power
	 AV / Input / RDS
	 Text / Goto
	 Shift + Exit / Cancel / Clear
	 Display / Media
	 Setup / OPT /
	 Stop / Hold
	 Zoom / Size
	 Eject / Surround
	 D.Menu / Top
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 CH+ / Page+
	 Menu / Home
	 Vol+

Original	Sustituto
	 CH- / Page-
	 Exit / Cancel / Clear
	 Vol-
	 Up
	 Left
	 OK
	 Right
	 Down
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9





Original		Sustituto		Original		Sustituto	
	FAV		Fav / Marker / PC				
	0		0				
	Recall		Back / Return				
	Picture		Picture / Format				
	Sound		Sound / Title				
	Nicam / A2		Audio / Lang I/II				
	Mute		Mute / Dimmer				
	Sleep		Sleep / Timer				
	Info		Info / Angle				
	Subtitle		Subtitle / EQ				
	Channel List		Smart / List				
	EPG		Guide / EPG / -/--				
	TV / Radio		TV/Radio /				

