
 


 





 
 












 
 




 






 
 






 
 
 

 
 
 

 
 


 

 
 



 

 
 



Original	Sustituto	Original	Sustituto
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 +  Shift + Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Sustituto	Original	Sustituto
8	 8	Mix Scan	 +  Shift + TV/R
9	 9	Tune-	 +  Shift + Left
Guide -/-- 1.	 Guide	Aft/Caf	 +  Shift + Ok
0/10	 0	Tune+	 +  Shift + Right
2.Fav P/C 2.	 Pre Ch	Bright- Sys	 +  Shift + Exit
Red	 Red	Contrast+	 +  Shift + Ch +
Green	 Green	Color- S.Std	 <<
Yellow	 Yellow	Contrast-	 +  Shift + Ch -
Blue	 Blue	3.*	 +  Shift + Guide
Audio-	 +  Shift + Play	4.# 16:9	 Format
Audio+	 +  Shift + Pause	Surround	 +  Shift + Red
Tone-	 I<<	Nicam/Mono	 +  Shift + Green
Tone+	 +  Shift + >>I	Level L	 +  Shift + Yellow
On/Tim	 +  Shift + Subt	Level R/Woofer	 +  Shift + Blue
Off/Tim	 +  Shift + Sleep		
Disp	 List		
Color+ P.Std	 >>		



Original	Sustituto	Original	Sustituto
On/Off	 Power	Menu Down	 Down
Mute	 Mute	Back	 Back
Reveal	 Pause	Volume+	 Vol +
Txt Stop	 Stop	Chan.Up	 Ch +
Info	 Shift + Info	Volume-	 Vol -
Subt.List	 Subt	Menu audio	 Dual
Sleep Timer	 Sleep	Chan.Down	 Ch -
Return TV	 TV/R	1	 1
Menu video	 D. Menu	2	 2
Text	 Text	3	 3
Txt Expand	 Eject	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Display	 Info	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide



Original	Sustituto	Original	Sustituto
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
Tone+	 Smart		

