









 




















 


 
 










 

























Original	Sustituto	Original	Sustituto
 Power	 Power	 Menu	 Menu / Home
 TV	 Shift + 1	 Left	 Left
 Tuner/Band	 Shift + 6	 Enter / Set	 OK
 FM Mode	 TV/Radio /	 Right	 Right
 DVD/CD	 Shift + 3	 OSD	 Smart / List
 DVD/CD	 Shift + 2	 Down	 Down
 I<</Skip Down	 I<< / Preset-	 Return	 Back / Return
 Power VCR	 Shift + Power	 Angle	 Info / Angle
 >>I / Skip Up	 >>I / Preset+	 RDS	 Shift + AV / Input / RDS
 TV / AV	 AV / Input / RDS	 Timer	 Sleep / Timer
 << Slow/Search	 << / Tune-	 Setup	 Setup / OPT /
 Slow/Search >>	 >> / Tune+	 Audio	 Audio / Lang I/II
 Stop	 Stop / Hold	 Subtitle	 Subtitle / EQ
 Pause	 Pause / Step / Freeze	 Play Mode	 Picture / Format
 Play	 Play / Slow	 1	 1
 Top Menu	 D.Menu / Top	 2	 2
 Up	 Up	 3	 3



