

 

 
 




 


























 





 





 
 
 

 
 



Original	Sustituto
VHS Power	Power
Audio	Dual
TV Power	Shift + Power
TV AV	Shift + AV
TV CH +	Shift + Ch +
TV CH -	Shift + Ch -
TV Volume +	Vol +
TV Volume -	Vol -
Operation Select VHS	Smart
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Sustituto
9	9
0	0
-/-- / ≥10	Guide
Cancel / Reset	Exit
CH + / Tracking/V-Lock +	Ch +
CH - / Tracking/V-Lock -	Ch -
Input	Media
Repeat	Text
I<< Index/Skip	I<<
>>I Index/Skip	>>I
<< REW	<<
>> FF	>>
Stop	Stop
Pause / Slow	Pause
Play	Play
Menu / Play List	Menu
Menu / Play List	List





Original	Sustituto
 DVD Power	 Power
 Audio	 Dual
 TV Power	 Shift + Power
 TV AV	 Shift + AV
 TV CH +	 Shift + Ch +
 TV CH -	 Shift + Ch -
 TV Volume +	 Vol +
 TV Volume -	 Vol -
 Operation Select DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 0	 0
 -/-- / ≥10	 Guide
 Cancel / Reset	 Exit
 Repeat	 Text
 I<< Index/Skip	 I<<
 >>I Index/Skip	 >>I
 << REW	 <<
 >> FF	 >>
 Stop	 Stop
 Pause / Slow	 Pause
 Play	 Play
 Direct Navigator / Top Menu	 Shift + Menu
 Direct Navigator / Top Menu	 D. Menu
 Menu / Play List	 Menu
 Up	 Up
 Left	 Left



