
 

 
 
 
 
 
 


 

 

 
 
 
 

 
 
 




Original		Sustituto		Original		Sustituto	
	Standby		Power		Digital Zoom-		- / Stop
	Info		Help / Info		Page Up		Shift + Vol + / Page +
	Menu/Exit		Menu		Page Down		Shift + Vol - / Page -
	Auto		Auto		Freeze		Freeze / Timer
	Eco Blank		Eco / Aspect		On/Timer		Shift + Freeze / Timer
	Source		Source		Set Up/Timer		Shift + Comp / Video
	Up/Keystone+		Up		CC		Shift + Mode
	Down/Keystone-		Down		3D Settings		3D / Invert
	Right		Right		Quick Install		Comp / Video
	Left		Left		Teaching		Shift + Auto
	Mode/Enter		Enter				
	Smart Eco		Mode				
	Aspect		Shift + Eco / Aspect				
	Vol+		Vol + / Page +				
	Vol-		Vol - / Page -				
	Mute		Blank / Mute				
	Digital Zoom+		+ / Play				

