 











 






 











 







Original	Sustituto
 Power	 Power
 3D	 3D
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Timer	 AV
 Audio	 Dual
 Menu	 Menu
 Info	 Info

Original	Sustituto
 EPG	 Guide
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Vol +	 Vol +
 Vol -	 Vol -
 Prog -	 Ch -
 Prog +	 Ch +
 Liste	 List
 TXT	 Text
 S-T	 Subt
 TV / R	 TV/R
 Play / Pause	 Play
 Play / Pause	 Pause





Original	Sustituto	Original	Sustituto
	Stop		Stop
	Rec		Rec
	←		Back
	Red / <<		Red
	Red / <<		<<
	Green / >>		Green
	Green / >>		>>
	Yellow / I<<		Yellow
	Yellow / I<<		I<<
	Blue / >>I		Blue
	Blue / >>I		>>I

