




Original	Sustituto
 Power	 Power
 Text / Display	 Text
 Call / Index	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Input	 AV
 Menu / DVD	 Menu
 → [/] ←	 3D

Original	Sustituto
 Aspect	 Format
 Exit	 Exit
 Up / P+	 Up
 Up / P+	 Ch +
 Down / P-	 Down
 Down / P-	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 I/II	 Dual
 Audio	 Shift + Dual










 




 



 
 


 
 
 









Original	Sustituto	Original	Sustituto
 Mute	 Mute		
 Play / Reveal	 Smart		
 Stop / Hold	 Stop		
 Play / Reveal	 Play		
 << / Size	 <<		
 >> / [O] / [≡X]	 >>		

Original	Sustituto





Original	Sustituto	Original	Sustituto
 Power	 Power		
 Menu DVD	 Menu		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 Pause	 Pause		
 Play	 Play		
 <<	 <<		
 >>	 >>		
 Open/Close	 Eject		
 Stop	 Stop		
 I<<	 I<<		
 >>I	 >>I		





	Original	Sustituto
	Power	 Power
	Pause	 Pause
	Play	 Play
	<<	 <<
	>>	 >>
	Eject	 Eject
	Stop	 Stop
	I<<	 I<<
	>>I	 >>I

Original	Sustituto

