



Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back
 Still	 Pause
 TV / Input	 AV
 Multimedia	 Media
 Zoom -	 Shift + Down
 Zoom +	 Shift + Up

Original	Sustituto
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Down / PR -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 Menu	 Menu
 Menu	 Ok
 Prev PR	 Pre Ch
 Screen Size	 3D
 Mute	 Mute
 Sleep	 Sleep
 [≡]	 Text
 [≡?]	 Smart
 [≡X]	 Exit



 
 
 








 
 

 
 

 


Original	Sustituto	Original	Sustituto
[≡⇅]	Eject		
[≡●]	TV/R		
[≡□]	Stop		
Pic Mode / [≡≡]	Format		
Sound Mode / [≡i]	Dual		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue / I-II	Blue		
Blue / I-II	SHIFT + Dual		





Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV / Input	 AV
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Down / PR -	 Ch -
 Menu	 Menu

Original	Sustituto
 Menu	 Ok
 << FR / Slow	 <<
 Play	 Play
 >> FF / Slow	 >>
 Stop	 Stop
 I<< Prev	 I<<
 Open / Close	 Eject
 >>I Next	 >>I
 Pause	 Pause





Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Menu	 Ok
 Down / PR -	 Ch -
 Menu	 Menu

Original	Sustituto
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue / I-II	 Blue
 Blue / I-II	 Dual

