





















































Original	Sustituto	
Power		Power
Mute		Mute / Dimmer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Text		Text / Goto
Recall / S.Page		Back / Return
Index / PVR List		Smart / List
Reveal / Rec		Rec / Rec Mode
Zoom / T.Shift		Zoom / Size

Original	Sustituto	
Hold / Auto		Shift + Stop /
Hold / Auto		D.Menu / Top
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Vol +		Vol+
Vol -		Vol-
I - II		Audio / Lang I/II
Source		AV / Input / RDS
CH +		CH+ / Page+
Freeze		Shift + Pause / Step /
CH -		CH- / Page-
Sleep		Sleep / Timer
Menu		Menu / Home
Exit		Exit / Cancel / Clear
DTV / Radio		TV/Radio /


























 









Original	Sustituto	
Aspect	 + 	Shift + Picture / Format
Up		Up
Left		Left
OK		OK
Right		Right
Down		Down
P.Mode		Picture / Format
S.Mode		Sound / Title
Media		Display / Media
Info		Info / Angle
Subtitle		Subtitle / EQ
Play / Pause		Play / Slow
I<<		I<< / Preset-
Play / Pause		Pause / Step / Freeze
>>I		>>I / Preset+
Stop		Stop / Hold
<<		<< / Tune-

Original	Sustituto	
>>		>> / Tune+
Slow / FAV		Fav / Marker / PC
A-B / Fav -	 + 	Shift + Yellow / YouTube /
Repeat / Fav +	 + 	Shift + Green / APP /
Repeat / Fav +	 + 	Shift + Up
A-B / Fav -	 + 	Shift + Down





Original	Sustituto	Original	Sustituto
Power		Power	Power
Freeze		Pause / Step / Freeze	
Swap		Back / Return	
PIP		Eject / Surround	
I-II		Audio / Lang I/II	
FAV.CH		Fav / Marker / PC	
[≡]		Text / Goto	
Mute		Mute / Dimmer	
Sleep		Sleep / Timer	
P.Size		Zoom / Size	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	

Original	Sustituto	Original	Sustituto
8		8	
9		9	
0		0	
Vol+		Vol+	
Jump		Setup / OPT /	
ENT		Smart / List	
Vol-		Vol-	
Info		Info / Angle	
Source		AV / Input / RDS	
CH+		CH+ / Page+	
Ch-		CH- / Page-	
Exit		Exit / Cancel / Clear	
Menu		Menu / Home	
Up		Up	
Left		Left	
OK		OK	
Right		Right	





Original	Sustituto	Original	Sustituto
Down	 Down		
S.Mode	 Sound / Title		
P.Mode	 Picture / Format		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
[≡i]	 Display / Media		
[≡?]	 Play / Slow		
[≡↓]	 D.Menu / Top		
[≡□]	 Stop / Hold		

