

 



Original	Sustituto
	
MUTE	MUTE
DISPLAY	INFO
MENU	TOP MENU
TV/AV	TIMER
SYS	HOME SMART
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	GUIDE

Original	Sustituto
RECALL	FAV PRE-CH
V +	VOL +
V -	VOL -
P +	CH +
P -	CH -
Up	Up
Left	Left
ENTER	OK
Right	Right
Down	Down
→ S ←	SOUND DUAL
P.P	PICTURE FORMAT
NICAM	SHIFT + SOUND DUAL
SLEEP	PROG SLEEP
HOLD	Stop
INDEX	APP MEDIA
SIZE	ZOOM Eject





	Original	Sustituto		Original	Sustituto
PGUP	PGUP	 Shift + Ch +			
PGDN	PGDN	 Shift + Ch -			
TEXT	Text	 Text			
REVEAL	Reveal	 Options			
SUBPAGE	Subpage	 Subt			
RED	Red	 Red			
GREEN	Green	 Green			
YELLOW	Yellow	 Yellow			
CYAN	Cyan	 Blue			

