

















































 








 
 
 
 























Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Source	 AV / Input / RDS
 Vol+	 Vol+
 A/D/Content Menu	 Smart / List
 P+	 CH+ / Page+
 Vol-	 Vol-

Original	Sustituto
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 Menu/DVD	 Menu / Home
 Exit/Return	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Guide/Top	 Guide / EPG / -/-
 Down	 Down
 Tv/FAV/Radio/Set	 TV/Radio /
 Tv/FAV/Radio/Set	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [<>]	 Picture / Format



 

 












 















Original	Sustituto	Original	Sustituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit/Return		Back / Return
			Up
			Left
			OK
			Right
			Guide/Top
			Down
			Tv/FAV/Radio/Set
			[<>]
			Display / Media
			[i+]/[≡i]
			Text
			Audio
			Subtitle
			Eject
			O)/II
			Stop
			Play/[≡o]
			Up
			Left
			OK
			Right
			D.Menu / Top
			Down
			Setup / OPT /
			Picture / Format
			Display / Media
			Info / Angle
			Text / Goto
			Audio / Lang I/II
			Subtitle / EQ
			Eject / Surround
			Shift + Audio / Lang I/II
			Stop / Hold
			Play / Slow





Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Source	 AV / Input / RDS
 Vol+	 Vol+
 A/D / Content	 Smart / List
 P+	 CH+ / Page+
 Vol-	 Vol-

Original	Sustituto
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 Menu/DVD	 Menu / Home
 Exit/Return	 Shift + Back / Return
 Exit/Return	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Guide/Top	 D.Menu / Top
 Down	 Down
 Tv/FAV/Radio/Set	 TV/Radio /
 Tv/FAV/Radio/Set	 Setup / OPT /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Original	Sustituto	Original	Sustituto
[\ll >]	Picture / Format		
\leftarrow / \rightarrow	Display / Media		
[i+] / [≡i]	Info / Angle		
Text	Text / Goto		
Audio	Audio / Lang I/II		
Subtitle	Subtitle / EQ		
Eject	Eject / Surround		
O)I/II	+ Shift + Audio / Lang I/II		
Stop	Stop / Hold		
Play/[≡o]	Play / Slow		
II/II > / [∇]	Pause / Step / Freeze		
I << / [≡?]	I << / Preset-		
<< / [≡+]	<< / Tune-		
>> / [≡◇]	>> / Tune+		
>>I/[O]/[≡X]	>>I / Preset+		

