







Original	Sustituto
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 REC	 Rec / Rec Mode
 0 / AV	 0
 0 / AV	 AV / Input / RDS
 OPT	 Setup / OPT /
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search













Original	Sustituto
 Green / Stop	 Stop / Hold
 Green / Stop	 Green / APP / Repeat
 Yellow / Play / Slow	 Play / Slow
 Yellow / Play / Slow	 Yellow / YouTube / Repeat
 Blue / Aspect / Picture	 Picture / Format
 Blue / Aspect / Prime Video / Random	 Blue / Prime Video / Random
 Blue / Aspect / Tune+	 >> / Tune+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI / EPG	 Guide / EPG / -/-
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+





Original

Sustituto

 
	TV / Radio		TV/Radio /
	Vol -		Vol-
	Prog -		CH- / Page-
	Menu		Menu / Home
	Vol +		Vol+
	TXT / Mix		Text / Goto
	Still		Pause / Step / Freeze
	PIP		D.Menu / Top
	Sound		Sound / Title
	SAT1		Shift + 2
	SAT2		Shift + 3
	TV		Shift + 1
	Sleep		Sleep / Timer

Original

Sustituto





Original	Sustituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	REC / Rec Mode
	AV / Input / RDS
	0
	Setup / OPT /
	<< / Tune-
	Red / Netflix / Search

Original	Sustituto
	Green / APP / Repeat
	Stop / Hold
	Play / Slow
	Yellow / YouTube / Repeat
	>> / Tune+
	Picture / Format
	Blue / Prime Video / Random
	Up
	Left
	OK
	Right
	Down
	Guide / EPG / -/-
	Exit / Cancel / Clear
	Back / Return
	Info / Angle
	CH+ / Page+





Original		Sustituto		Original		Sustituto	
TV RADIO	TV / Radio	PROGRAM TV/RADIO	TV/Radio /				
+	Vol -	VOL -	Vol-				
-	Prog -	CH PAGE -	CH- / Page-				
MENU	Menu	HOME MENU	Menu / Home				
-	Vol +	+ VOL	Vol+				
TXT	TXT / Mix	GOTO TEXT	Text / Goto				
STILL	Still	STEP-FREEZE	Pause / Step / Freeze				
PIP	PIP	TOP MENU D.MENU	D.Menu / Top				
SOUND	Sound	TITLE SOUND	Sound / Title				
SAT1	SAT1	SHIFT + DVD 2	Shift + 2				
SAT2	SAT2	SHIFT + CD- STB 3	Shift + 3				
TV	TV	SHIFT + TV 1	Shift + 1				
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer				





Original	Sustituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	REC / Rec Mode
	AV / Input / RDS
	0
	Setup / OPT /
	Red / Netflix / Search
	<< / Tune-

Original	Sustituto
	Green / APP / Repeat
	Stop / Hold
	Play / Slow
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Picture / Format
	>> / Tune+
	Up
	Left
	OK
	Right
	Down
	Guide / EPG / -/-
	Exit / Cancel / Clear
	Back / Return
	Info / Angle
	CH+ / Page+





Original	Sustituto	Original	Sustituto
TV / Radio	TV/Radio /		
Vol -	Vol-		
Prog -	CH- / Page-		
Menu	Menu / Home		
Vol +	Vol+		
TXT / Mix	Text / Goto		
Still	Pause / Step / Freeze		
PIP	D.Menu / Top		
Sound	Sound / Title		
SAT1	Shift + 2		
SAT2	Shift + 3		
TV	Shift + 1		
Sleep	Sleep / Timer		

Original	Sustituto

