











 













Original	Sustituto
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 REC	 Rec / Rec Mode
 0 / AV	 0
 0 / AV	 AV / Input / RDS
 OPT	 Setup / OPT /
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search

Original	Sustituto
 Green / Stop	 Stop / Hold
 Green / Stop	 Green / APP / Repeat
 Yellow / Play / Slow	 Play / Slow
 Yellow / Play / Slow	 Yellow / YouTube / Repeat
 Blue / Aspect / Picture	 Picture / Format
 Blue / Aspect / Prime Video / Random	 Blue / Prime Video / Random
 Blue / Aspect / Tune+	 >> / Tune+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI / EPG	 Guide / EPG / -/-
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+



 
 




Original	Sustituto	Original	Sustituto
 TV / Radio	 TV/Radio /		
 Vol -	 Vol-		
 Prog -	 CH- / Page-		
 Menu	 Menu / Home		
 Vol +	 Vol+		
 TXT / Mix	 Text / Goto		
 Still	 Pause / Step / Freeze		
 PIP	 D.Menu / Top		
 Sound	 Sound / Title		
 SAT1	 Shift + 2		
 SAT2	 Shift + 3		
 TV	 Shift + 1		
 Sleep	 Sleep / Timer		






Original	Sustituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	REC / Rec Mode
	AV / Input / RDS
	0
	Setup / OPT /
	<< / Tune-
	Red / Netflix / Search

Original	Sustituto
	Green / APP / Repeat
	Stop / Hold
	Play / Slow
	Yellow / YouTube / Repeat
	>> / Tune+
	Picture / Format
	Blue / Prime Video / Random
	Up
	Left
	OK
	Right
	Down
	Guide / EPG / -/-
	Exit / Cancel / Clear
	Back / Return
	Info / Angle
	CH+ / Page+





Original	Sustituto
 TV / Radio	 TV/Radio /
 Vol -	 Vol-
 Prog -	 CH- / Page-
 Menu	 Menu / Home
 Vol +	 Vol+
 TXT / Mix	 Text / Goto
 Still	 Pause / Step / Freeze
 PIP	 D.Menu / Top
 Sound	 Sound / Title
 SAT1	 Shift + 2
 SAT2	 Shift + 3
 TV	 Shift + 1
 Sleep	 Sleep / Timer

Original	Sustituto














 


Original	Sustituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	REC / Rec Mode
	AV / Input / RDS
	0
	Setup / OPT /
	Red / Netflix / Search
	<< / Tune-

Original	Sustituto
	Green / APP / Repeat
	Stop / Hold
	Play / Slow
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Picture / Format
	>> / Tune+
	Up
	Left
	OK
	Right
	Down
	Guide / EPG / -/-
	Exit / Cancel / Clear
	Back / Return
	Info / Angle
	CH+ / Page+





Original		Sustituto	
	TV / Radio		TV/Radio /
	Vol -		Vol-
	Prog -		CH- / Page-
	Menu		Menu / Home
	Vol +		Vol+
	TXT / Mix		Text / Goto
	Still		Pause / Step / Freeze
	PIP		D.Menu / Top
	Sound		Sound / Title
	SAT1		Shift + 2
	SAT2		Shift + 3
	TV		Shift + 1
	Sleep		Sleep / Timer

Original		Sustituto	

